




INSTALLATION INSTRUCTIONS

DUAL EXTREME STAINLESS EXHAUST W/ DOWNPIPE

FORD F250/F350 SUPER DUTY TRUCK 6.0L 2/4WD

EXTENDED CAB, SHORT BED

PART #69711

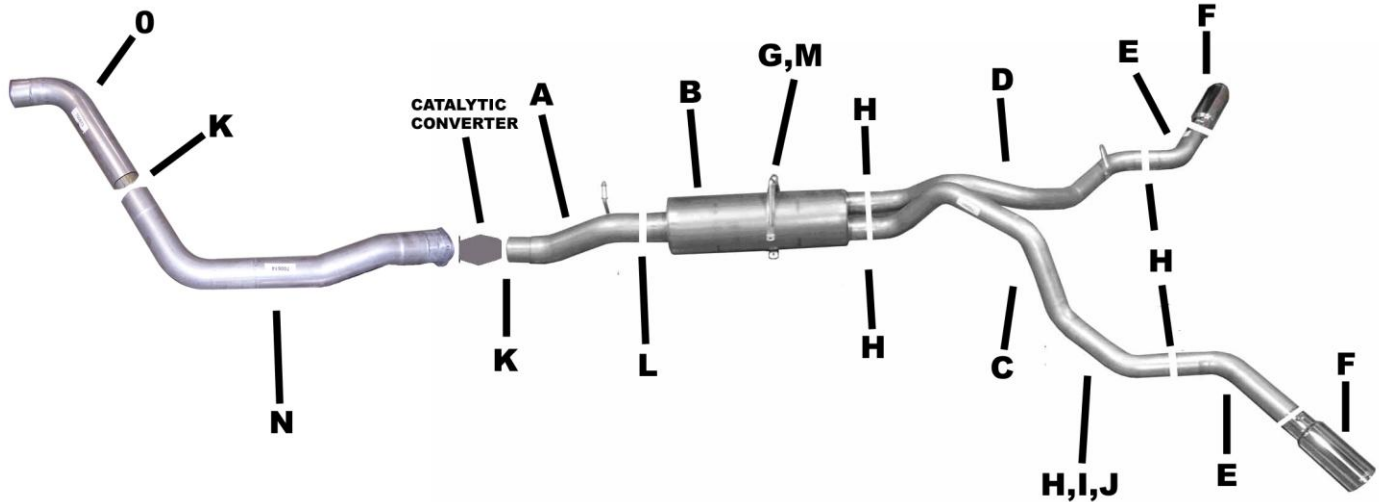

ITEM	PART	QUANTITY	DESCRIPTION
A	845-700568S	1	4" Stainless Headpipe w/ welded hanger
B	758400S	1	Stainless Superflow Muffler
C	658-700491S	1	3" Stainless Driver-side over axle tailpipe
D	659-700492S	1	3" Stainless Passenger-side over axle tailpipe
E	101-50032RS-6	2	3" Stainless Exit pipe
F	500379	2	4" Stainless tip
G	4217	1	8" Band clamp
H	OHD300	5	3" Clamp
I	8269	1	10" Hanger
J	BO-101	1	Bolt Kit for 10" Hanger
K	4170	2	3 1/2" Clamp
L	4171	1	4" Clamp
M	BO-1015	1	Bolt Kit for Band Clamp
N	881-700613S	1	3 1/2" Stainless Downpipe w/ flange
O	869-700614S	1	3 1/2" Stainless Downpipe off turbo w/ flair

Thank you for purchasing our Gibson exhaust system for your vehicle.
If you need further assistance, please do not hesitate to call our technical dept at (800) 528-3044
Monday through Friday, 8:00 am to 5:00 pm.

INSTALLATION INSTRUCTIONS #69711 – Step 1


DOWN PIPE INSTRUCTIONS

When installing this exhaust system make sure to use proper safety precautions. Use jack stands when under the truck, set parking brake, block tires and use safety glasses and gloves.


DO NOT WORK WITH HOT PIPES!

SUGGESTED TOOLS:

1/2", 9/16", 15mm Socket & Wrench, WD-40, Jack Stand, Hacksaw

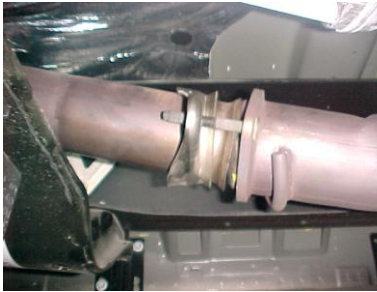

TO INSTALL YOUR GIBSON DOWN PIPE YOU NEED TO REMOVE YOUR STOCK EXHAUST. REMOVE THE STOCK EXHAUST FROM THE CLAMP LOCATED JUST BEHIND THE CATALYTIC CONVERTER. CUT OFF YOUR STOCK TAILPIPE FOR EASIER REMOVAL. LEAVE ALL RUBBER GROMMETS IN PLACE. USE WD-40 TO AID IN REMOVAL OF EXHAUST AND HANGER. AFTER YOUR STOCK EXHAUST IS REMOVED YOU NEED TO REMOVE THE CATALYTIC CONVERTER FROM THE 2-BOLT FLANGE.

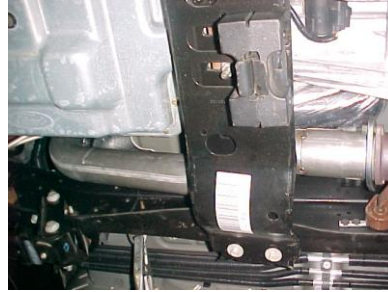

INSTALL PIPE #N ONTO PIPE #O. USE CLAMP # K TO SECURE PIPES TOGETHER. DO NOT TIGHTEN.




NOW CUT YOUR STOCK DOWN PIPE LIKE SEEN IN THE PICTURE.



RE-INSTALL YOUR CATALYTIC CONVERTER TO THE NEW DOWN PIPE. USING YOUR FACTORY NUTS.



REMOVE THE REMAINING STOCK DOWN PIPE BY UNCLAMPING IT FROM THE TURBO HOUSING. USE A 11MM SOCKET OR WRENCH TO REMOVE YOUR STOCK PIPE THROUGH THE BOTTOM. DO NOT DISCARD THE STOCK CLAMP YOU WILL NEED TO RE-USE IT.

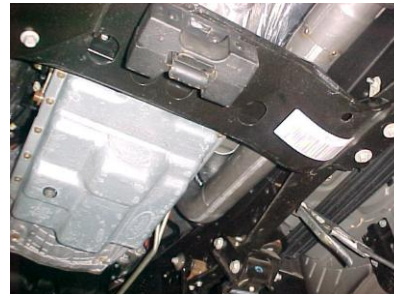

NOW INSTALL YOUR CAT-BACK EXHAUST ACCORDING TO THE INSTRUCTIONS PROVIDED IN STEP 2.



INSTALL PIPE #O ONTO TURBO USING YOUR STOCK CLAMP. DO NOT TIGHTEN.



INSTALLATION INSTRUCTIONS #69711 – Step 2

CAREFULLY READ INSTRUCTIONS BEFORE STARTING INSTALLATION

When installing this exhaust system make sure to use proper safety precautions. Use jack stands when working under the vehicle, set parking brake, block tires and use safety glasses and gloves. Allow exhaust to cool before attempting installation. Severe injury or burns could occur if safety measures are not taken.

SUGGESTED TOOLS: 1/2", 9/16" 15mm wrenches & sockets, WD-40, hacksaw, jack stands.

1. Disconnect the negative battery cable before removal of OEM exhaust. This will allow the computer to reset and recognize the new exhaust. Lay out the exhaust on the floor so it looks like the drawing and compare parts with manual.



2. TO REMOVE STOCK EXHAUST UN-BOLT IT FROM THE CLAMP LOCATED JUST BEHIND THE CATALYTIC CONVERTER. CUT OFF YOUR STOCK TAILPIPE AND REMOVE. LEAVE ALL RUBBER GROMMETS IN PLACE. USE WD-40 TO AID IN REMOVAL OF EXHAUST AND HANGERS.




6. INSTALL PASSENGER SIDE OVERAXLE TAILPIPE # D INTO MUFFLER 1 1/2" TO 2" INSERT WELDED HANGER INTO RUBBER GROMMET. USE CLAMP # H TO SECURE PIPE TO MUFFLER. DO NOT TIGHTEN.



3. INSTALL HEADPIPE #A ONTO STOCK HEADPIPE, LINE UP THE NOTCH AND INSERT WELDED HANGERS INTO RUBBER GROMMETS USE CLAMP # K TO SECURE PIPES TOGETHER. DO NOT TIGHTEN. LEAVE LOOSE FOR EASIER INSTALLATION.



7. MEASURE 18 1/2" FROM THE REAR OF THE FRAME YOU WILL USE THIS SLOT FOR YOUR 10" HANGER #I. USE THE 3RD HOLE FROM THE TOP. USE CLAMP # H TO HOLD TAILPIPE # C TO HANGER. DO NOT TIGHTEN.

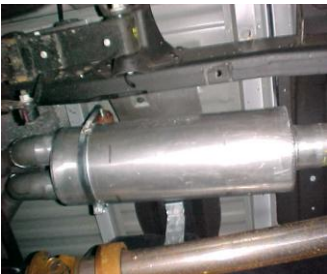

4. INSTALL BAND CLAMP # G INTO RUBBER GROMMETS LOCATED ABOVE THE REAR AXLE AND ATTACH WITH BOLT KIT #M. DO NOT TIGHTEN. INSTALL MUFFLER # B THROUGH BAND CLAMP AND ONTO HEADPIPE. USE CLAMP # L TO SECURE MUFFLER TO HEADPIPE. DO NOT TIGHTEN.



8. INSTALL TURNOUT PIPES # E ONTO BOTH TAILPIPES. ROTATE TILL LEVEL . USE CLAMP #H TO SECURE EXITPIPES TO TAILPIPES AFTER CHECKING FOR PROPER CLEARANCE. TIGHTEN ALL CLAMPS STARTING FROM THE FRONT AND WORKING YOUR WAY BACK.



5. INSTALL DRIVERS SIDE OVER AXLE TAILPIPE # C INTO MUFLER 1 1/2" TO 2" USE CLAMP # H TO SECURE PIPE TO MUFLER. DO NOT TIGHTEN.



9. INSTALL THE STAINLESS TIPS FOR YOUR DESIRED LOOK. TO CLEAN TIPS, USE ANY STAINLESS STEEL OR ALUMINUM CLEANER.

GIBSON EXHAUST systems are designed on a factory stock vehicle. Any aftermarket products installed could increase the sound levels of this Exhaust.

Make sure there is a 1" clearance from ALL rubber brake lines, shock boots, fuel lines, tires, etc to prevent heat related damage or fire.